



DOPAK® Process Sampler Type S32-LG

outage tube with bypass purge cylinder configuration (F6)

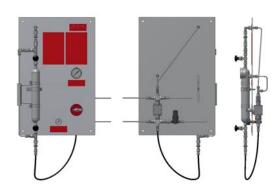


The ability to purge the sample point ensures optimal retrieval of a representative, contamination free sample. The S32-LG type samplers in bypass purge cylinder configuration provide a system purge in addition to sampling in a sample cylinder with predefined filling rate. The predefined filling rate is achieved by using an outage tube. This system is equipped with a purge facility to enable purging of the sample cylinder connections with an inert gas. The unique design offers a one-handle operation by multiple valves. These features provide sample accuracy and safety. This sampler type is suitable for liquefied gases and liquids.

1 OPERATION/FUNCTION




0 - off

Install the sample cylinder and connect the flexible hose to the bottom side of the sample cylinder. Open the needle valves of the sample cylinder.




1 - system purge

Turn the handle to the "process" position, allowing the sample cylinder to be filled. To ensure a representative sample, this position can be held for any required time.



2 - off

Turn the handle to the "off" position. Close the two needle valves of the sample cylinder.





3 - purge

Turn handle to the "purge" position. The internal connection between the sample cylinder and the purge connection has now been made. The sample cylinder connections are being purged with an inert gas to the vent connection.



2 TYPICAL P & ID

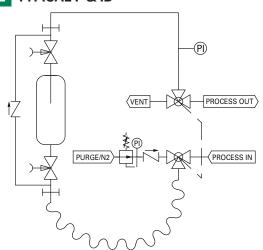



4 - off

Turn the handle to the "off" position. Disconnect the flexible hose. Remove the sample cylinder and connect the flexible hose to the top quick connect coupling.



3 FEATURES/ADVANTAGES/PROPERTIES

- Sampling in cylinder with predefined filling rateRepresentative sampling
- Zero dead volume
- Closed sampling
- One-handle operation of multiple valves
- Fixed volume sampling
- Purging of sampler
- Purging of quick connect couplings
- No direct connection between vent line and process lines

4 BASIC SPECIFICATIONS

| Material | SS316, SS316L. | at a |
|---------------|--|------|
| Cylinder Type | 500cc cylinder. | |
| Outage Tube | Suited for 85% filling of sample cylinder. | |
| Valve | Three-way ball valve type W83. PTFE seats, Viton A O-rings. Pressure range 103 bar @ 20°C (1500 psig @ 70°F). Temperature range -17/+232°C (0/+450°F). | |
| Operation | Manual. | |
| Connections | 1/4" FNPT. Regulator, pressure gauge and check valve included. | 4 43 |
| Please note: | the above is a basic specification only. DOPAK® Samplers can be offered with a wide variety of options as mentioned below. | |

5 OPTIONS


- Spring return handle
- Lockable handle
- $\,\,\,\,\,\,\,\,\,$ Pipe stand
- □ Block valve
- Flow meter


- Enclosure
- Sample cooler
- Exotic materials
- Larger/smaller sample size


For more information please refer to our sheets:

Options for DOPAK $^{\!\scriptscriptstyle{(0)}}$ process sampler, sampling into a cylinder.

Components for DOPAK® process samplers.

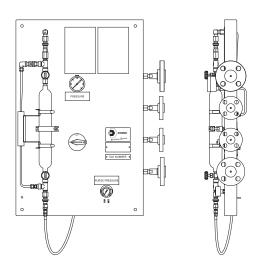

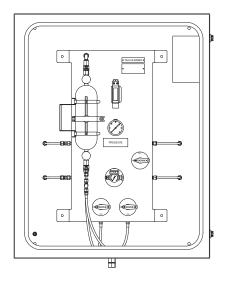



Dopak Inc.

Houston, Texas 77041, USA Phone 713-460-8311 Fax 713-460-8578 E-mail info@dopak.com

Dovianus BV

Bergschenhoek, The Netherlands

Phone +31 10 524 20 00 Fax +31 10 524 20 29 E-mail info@dopak.nl

Your local representative: